ASSEMBLY INSTRUCTION

STEP-1

FILL THE BASE WITH WATER.

STEP-2

LID THE BASE.

STEP-3

MATCH TWO HOLES BETWEEN THE MIDDLE RUBBER AND BASE.

STEP-4

PUT FOUR RUBBER PLUGS INTO BOTH SIDES.

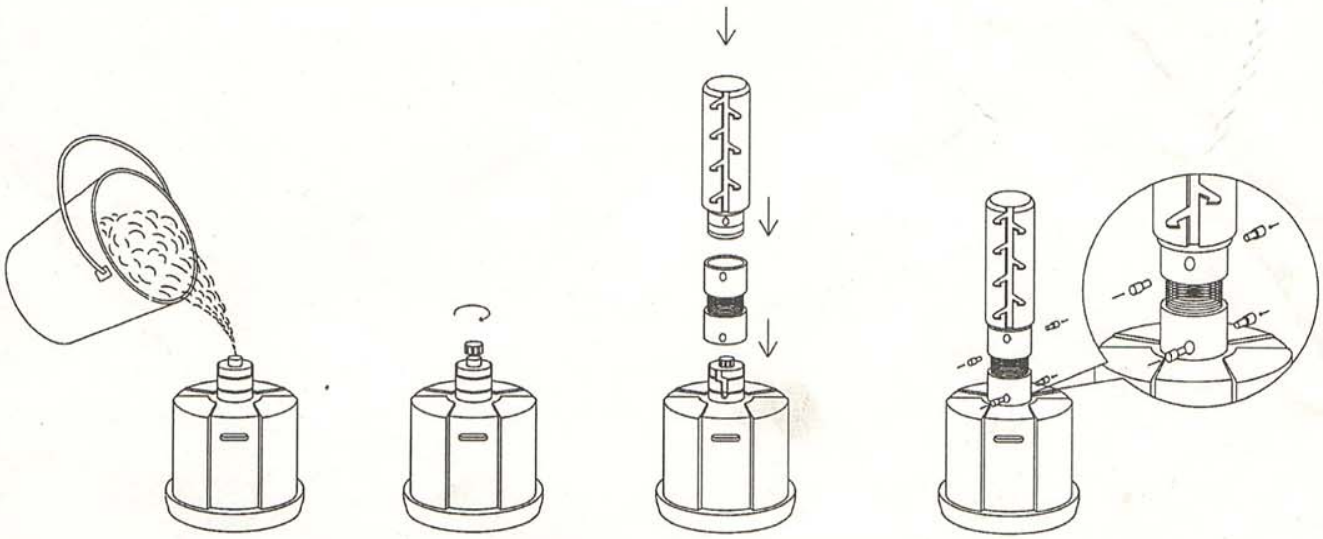

STEP-5

PUT 2 STEEL HOOPS OUTSIDE THE MIDDLE RUBBER AND LOCKED.

STEP-6

PUT THE PROTECTIVE SLEEVE OUTSIDE THE MIDDLE RUBBER.

STEP-7

SHAKE AND SLIP ON THE BAG TO THE MIDDLE RUBBER .

STEP-8
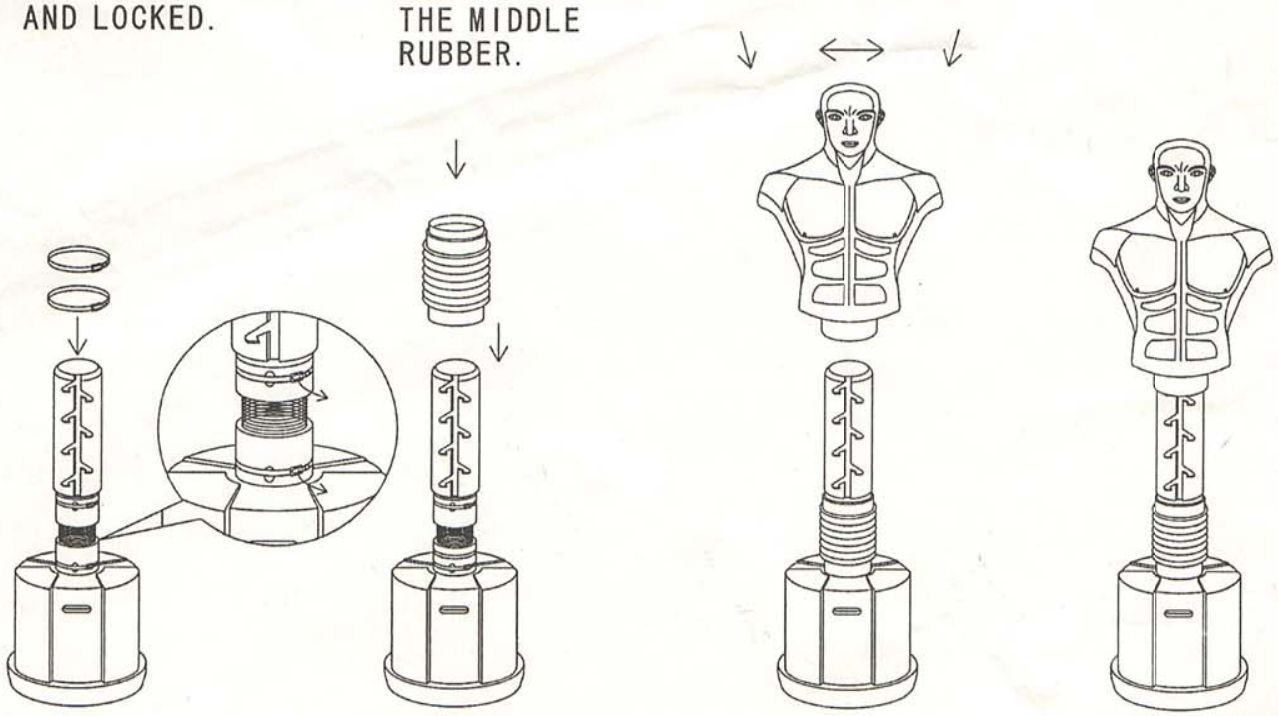
FINISHED.